
FIRMWARE UPGRADE

source: www.thuraya.com

date: 11.09.2017

THURAYA XT-LITE

Requirements for upgrade:

- Thuraya XT-LITE
- XT-LITE upgrader program
- USB data cable
- PC with Windows 10, Windows 8/8.1, Windows 7 or Windows Vista

Before upgrading an XT-LITE, please check which firmware is installed (go to Menu > Security > S/W version). Perform the upgrade only if Thuraya releases a firmware version newer than your existing one.

Please follow the below steps:

Step 1

Download the below XT-LITE Upgrader program.

- **XT-LITE upgrader**

Run the setup file - the Upgrader program including the USB driver will be installed.

Step 2

Download the latest Thuraya XT-LITE firmware release to your hard disk.

- **Multi-language firmware v1.3 (Optional - this upgrade is not required for existing XT-LITE users)**

Release notes for Multi-language v1.3:

- Includes LCD driver for new production batch of XT-LITE.

Step 3

Connect your XT-LITE with the PC/laptop via USB data cable.

You can now start the XT-LITE Upgrader program and locate the firmware on your hard disk. The Upgrader program will help you through the upgrade process.